

Grills: Taylor 2 & 3 Platen Product Recognition Grills

Temperature Calibration / Cook Time Change

Frequency	Twice a Month
Model	All Taylor Product Recognition Grills
Estimated time	20 minutes per grill

Health & Safety Hazards



Hot Surfaces

Food Safety



Critical Control Point




Inspect equipment. Do not use if damaged



Wash and dry hands **after** performing this task

Equipment

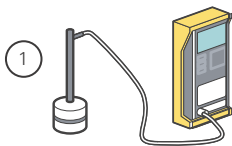


1. Pyrometer/Grill Probe




Probes are located front to rear of the grill surface and either 1 or 2 on the top platen.

NB: The teflon sheets must be OFF when checking temperatures

	Probes on the grill	Display on the grill	Temperature
1	Top platen	TOP TEMP	218°C
2	Lower Front platen	FRONT TEMP	177°C
3	Lower Centre platen	MIDDLE TEMP	177°C
4	Lower Back platen	BACK TEMP	177°C

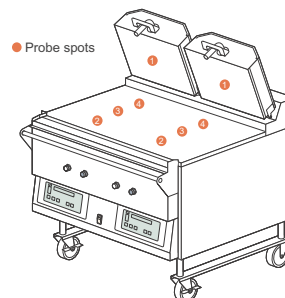


	Probes on the grill	Display on the grill	Temperature
1	Top Front platen	TOP FRONT	218°C
2	Top Back platen	TOP BACK	218°C
3	Lower Front platen	FRONT TEMP	177°C
4	Lower Center platen	MIDDLE TEMP	177°C
5	Lower Back platen	BACK TEMP	177°C

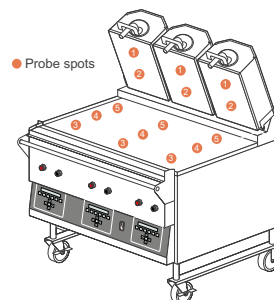

1



TEMPERATURE CALIBRATION

2

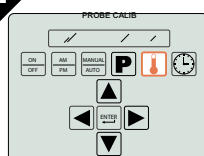


Press and hold the temp key for 3 seconds

 3

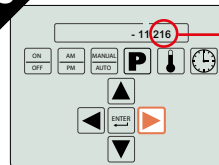


Place the surface probe on the first probe spot to check and allow to stabilise. Check the displayed temp against the reading on the pyrometer

4

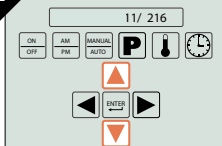


Press the up/down arrows to change the temperature values if needed to match the pyrometer

5

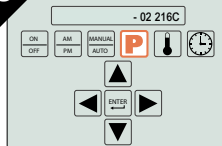

Press the right arrow to select the next probe to check (eg. top front)

6

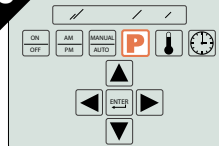


When all probes have been checked, Press **ENTER** to save data and exit

7


CHANGE COOK TIMES

8

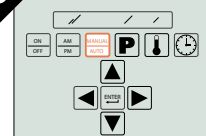


Press the 'MANUAL/AUTO' key to put the grill into manual mode

9

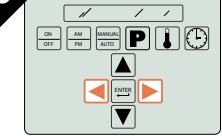


Scroll to the menu item that requires a change to the cook time by pressing the LEFT or RIGHT arrow keys

10

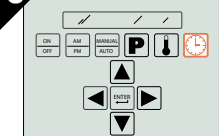


Press and hold the 'CLOCK' key for 3 to 5 seconds

11

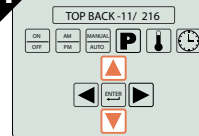


Use the 'UP' arrow key to increase the time and the 'DOWN' arrow key to decrease time by one second

12

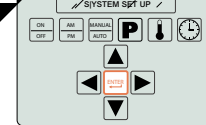

Press the 'ENTER' key to save change

13

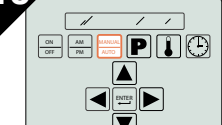

Press the 'MANUAL/AUTO' key to put the grill back to auto mode