

DCFT Daily Cleaning Process

Daily cleaning of the DCFT vertical toaster

Frequency

Daily

Models

Prince Castle DCFT

Estimated Time to Complete

20 minutes

Health and Safety Hazards



Chemicals



Hot Surface

Food Safety



Wash and dry hands **before and after** performing this task



 
Ensure nuts, bolts & screws are tight



Inspect equipment. Do not use if damaged

Equipment

1



1. Red border cloth

2



2. Grill cloth

3



3. Solid Sense Sanitiser

4



4. Heat-resistant Gloves

5



5. Sanisiter Solution

6



6. McDonald's DR Concentrated Disinfectant Cleaner

7



7. KAY® Specialty Cleaner & Polish

Procedure

1

Turn the toaster OFF.

Put on the heat-resistant gloves. Hot Surfaces

NOTE: Failure to wear gloves while performing this cleaning procedure can result in burns.



2

Remove the release sheet from the toaster and clean.

- Remove release sheet and place on a clean, flat and dry surface.
- Inspect the release sheet.
- Replace sheet if any tears or cracks are found or if excessive build-up cannot be removed.

NOTE: DO NOT fold or crease release sheet or take to the 3-compartment sink to be cleaned.



3

- Clean the entire surface of the release sheet.
- Immediately rinse the sheet with a clean, using a red boarder cloth.
- Flip the release sheet over and repeat cleaning instructions.
- Rinse this side of sheet.
- Re install release sheet after cleaning"



4

Check to see that 12.7 mm (1/2") of release sheet extends below each side of the platen.

NOTE: If 12.7 mm (1/2") of the release sheet does not extend below the bottom of the platen, then the sheet is not properly positioned.

NOTE: Make sure release sheet is completely dry before installing.
NOTE: When installing release sheet, you may flip inside-out and use the other side if needed.



5**Clean front and rear conveyor and club belts.**

- With power off, remove gloves from hands to unscrew and lift lid and open front conveyor door.
- Put heat-resistant gloves back on to clean.

**6**

- Using a red border cloth and sanitiser, clean the front main conveyor and club belts.
- Close front door, power unit ON, count 13 seconds to reveal unclean side of belt, power unit OFF, open door and repeat cleaning using the sanitizer-soaked towel.

**7**

- Repeat the belt cleaning process for rear main conveyor belt, rear club belt and rear inner panel.

**8**

- Close the conveyor access door and secure.
- Re-tighten top cover screws.

**9****Remove wire bun chute and clean.**

- Lift chute at an angle, lifting rear of chute and then pulling chute forward out of toaster.
- Clean following the 4 step cleaning method and allow to air dry.

**10****Clean landing zone and reinstall wire bun chute.**

- Spray a clean, sanitizersoaked towel with approved detergent solution or McDonald's DR Concentrate Disinfectant Cleaner.
- Using a red sanitised border cloth and match up cleaning solution clean the toaster bun landing zone.
- Spray all areas of the Pick-Up Zone with SolidSense Sanitizer and allow to air dry.

**11**

- Install wire bun chute by sliding the wire bun chute over the landing zone and into the toaster.
- Position the chute so that the rear of the chute is secured by 2 posts at the rear of the toaster.

NOTE: Front edge of the wire bun chute should be positioned at the edge of the toaster landing zone.



12

- Proper installation of wire bun chute is shown above right.
- Improper installation of wire bun chute is shown on the right.

14**Turn the toaster ON.**

Allow the toaster to warm up. The toaster is now ready to resume use.

**13****Clean exterior of the toaster.**

- Clean exterior of toaster unit and all parts with a clean, sanitizer-soaked towel sprayed with approved degreaser solution or McDonald's DR Concentrated Disinfectant Cleaner.
- Rinse exterior of unit using a clean, sanitizer-soaked towel.

NOTE: If streaking occurs, spray a paper towel with KAY Specialty Cleaner & Polish and wipe down to polish the

