

Grills: Taylor 2 & 3 Platen

Product Recognition Grills

Daily set up and breakfast change over

Frequency	Daily
Model	All Taylor Product Recognition Grills
Estimated time	30 minutes

Health & Safety Hazards



Hot Surfaces

Food Safety



Critical Control Point




Inspect equipment. Do not use if damaged



Wash and dry hands **after** performing this task

Equipment

None

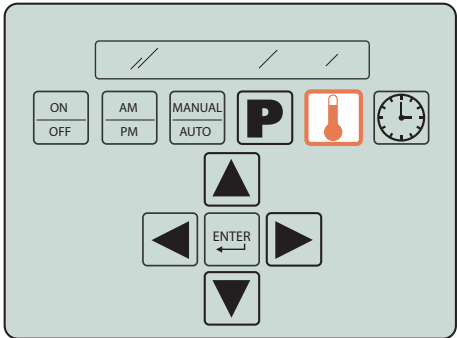


1




Fit all release sheets to platens before switching on the grill. Slide the release material retention bar through the loop in the release sheet

2

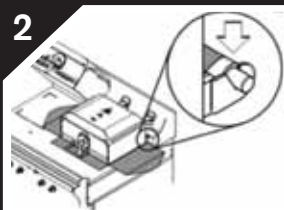


Engage the material retention bar into the hooks provided on the platen

3

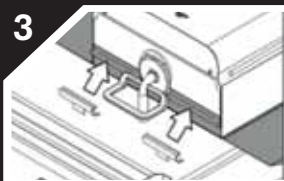


Center the release sheet on the bar. Pull it tightly over the release material bar located in the front of the platen. Secure the sheet with two locking clips

4

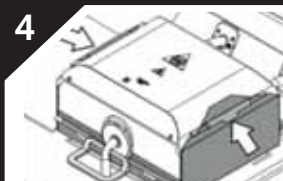

Carefully wrap the release sheet side flaps over the cover rails and secure the sheet with locking clips

5

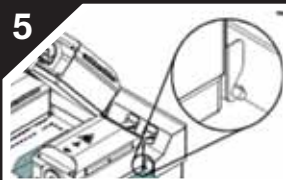


Center the release sheet on the bar. Pull it tightly over the release material bar located in the front of the shroud. Secure the sheet with a locking clip

6



Place the fan interlock switch in the ON position. The controller will display the message "OFF"

7

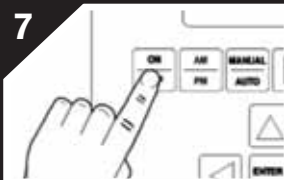

Heat up the grill by pressing the on/off key for 3-5 seconds. "AM TOO COLD" and AM FOLDED EGGS - FLAT" will be displayed on the control screen

8



Press the Standby button to close the clam

9

When the grill has reached the proper temperature, the screen will display, "PLEASE WAIT FOR AUTO LEVELING".

When the Auto Leveling is complete, the upper platen will raise. The screen will display the product that had been selected

10

CHANGEOVER

11

AM

PM

To turn from the egg cooking (AM) to main menu (PM) before changeover press the AM/PM key. Warm up time approx 15 minutes

12

MANUAL

AUTO

Press Manual/Auto to put the grill into PM automatic (for product recognition). The grill should ALWAYS be set to Automatic after 10.30