

Grills: Garland 2 & 3 Platen

Product Recognition Grills

Daily set up and breakfast change over

Frequency	Daily
Model	All Garland Product Recognition Grills
Estimated time	30 minutes

Health & Safety Hazards



Hot Surfaces

Food Safety



Critical Control Point




Inspect equipment. Do not use if damaged




Wash and dry hands **after** performing this task

Equipment

None

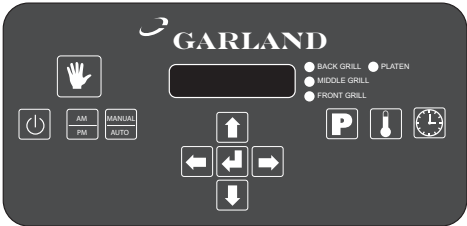


1

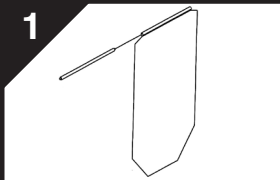


Fit all release sheets to platens before switching on the grill. Slide release material rod through hemmed end of the release material sheet.

2

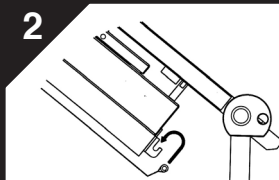


Hook release material rod on brackets located at the rear of the upper platen

3

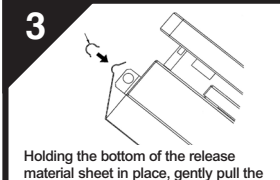


Holding the bottom of the release material sheet in place, gently pull the sheet toward the front of the platen. Place locking clips over release material sheet and press into place over release material bar.

4

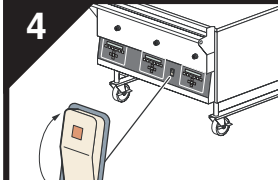


Press the MAIN switch to the on position. The Display shows 'OFF'.

5

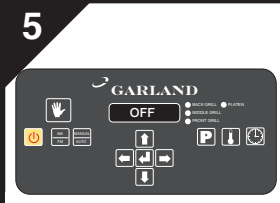

Press and hold ON for 3 seconds to switch on

6

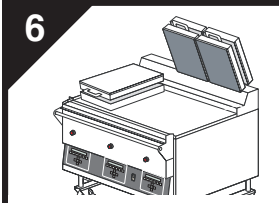


Top platens will lower and the grill begins preheating. Display shows 'AM Preheating McDonald's Grill'.

7



Wait 30 minutes for the grill to heat up and for the "calibration" to be completed

8

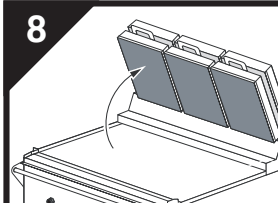

9




Press **AM** select for breakfast menu and **Right Arrow** to select Round or Folded Eggs

10


CHANGEOVER

11

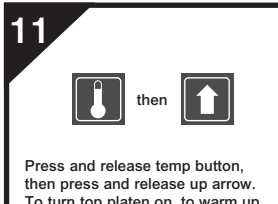


Press and release temp button, then press and release up arrow. To turn top platen on, to warm up to 218°C ready for changeover - 15min warm up time.

12

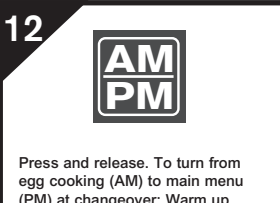

Press and release. To turn from egg cooking (AM) to main menu (PM) at changeover: Warm up time from 129°C to 177°C aprox 5 minutes.

13

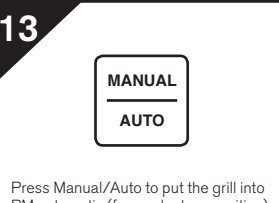

Press Manual/Auto to put the grill into PM automatic (for product recognition). The grill should ALWAYS be set to Automatic after 10.30