

Blended Ice Machine - Manitowoc BIC

Card No. **BI292**

Daily Cleaning

Frequency	Daily
Model	MANITOWOC Blend-In-Cup Machine MB-8-1
Estimated Time to Complete	15 minutes


Health & Safety Hazards

-  Sharp objects / surfaces
-  Chemicals

Food Safety

-  Wash and dry hands **before** and **after** performing this task
-  Ensure nuts, bolts & screws are tight
-  Inspect equipment. Do not use if damaged

EQUIPMENT



Sanitised red border cloth



Red cleaning cups (x2)



Blue cleaning cups (x2)



SolidSense APSC



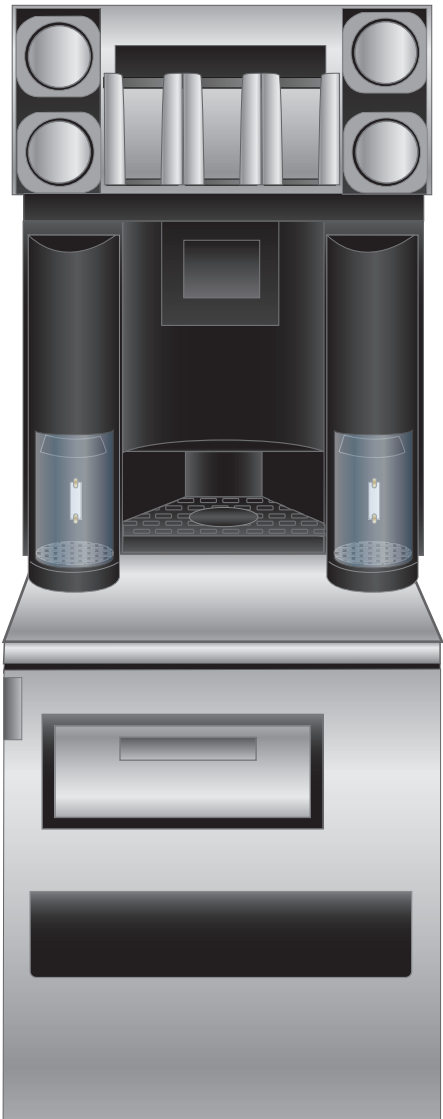
SolidSense Sanitizer




SolidSense Sanitizer spray

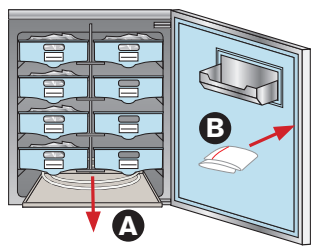
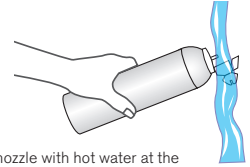
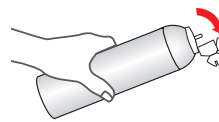


Multi-Surface & Glass Cleaner Spray

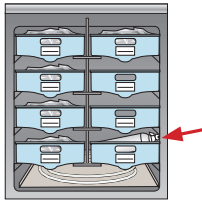


1

Prepare 2x red cleaning cups with SolidSense Sanitiser and 2x blue cleaning cups with SolidSense APSC. (A) Remove the drip tray from the bottom of the refrigerated cabinet. Wash, rinse & sanitise. Return drip tray to machine. (B) Use a red border cloth to wipe inside the cabinet and around door seals.

**2****CREAM CANISTER DAILY CLEAN**

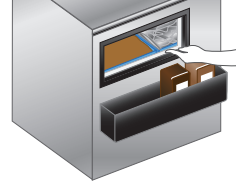
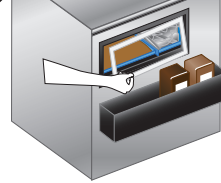
Complete this task for any open cream canisters. Flip open the nozzle as shown and then rinse the nozzle with hot water at the backroom sink to remove all cream residue. Shake the can to remove excess water. Leave the nozzle open and return to the Blended Ice Machine.

3

Temporarily store the cream canister(s) in the main refrigerated compartment.

4**CREAM CANISTER DOOR CLEAN**

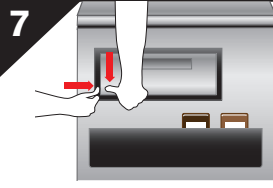
Hold the main door closed with one knee and open the cream canister door (holding it on the left side). Pull the door forward to remove it. Clean door using 4 step cleaning method.

5

Carefully pull the cream door seal off. Clean seal using 4 step cleaning method and wipe the exposed area of the chiller door with a clean, sanitised red border cloth. To replace seal, push with one finger all the way around to fit it in the groove.

6

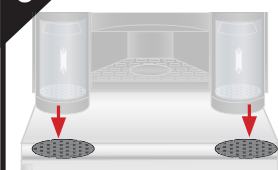
Replace drawer by locating the sprung hinge on the right hand side in its socket.

7

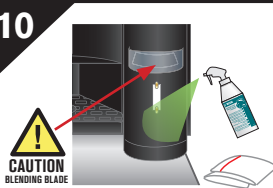
Press in the sprung hinge on the left hand side and push the drawer in to place.

8

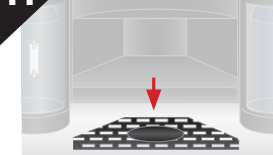
On the menu screen, press the (washing hand icon). Then press the **Daily Clean** icon.

9**GRATE REMOVAL**

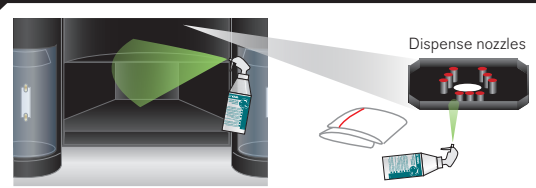
Remove grates from left and right blending stations.

10

Spray the blender station surfaces with multi-surface cleaner and thoroughly wipe down. Repeat for both sides.

11**GRATE REMOVAL**

Remove the centre grate from the dispensing area.

12

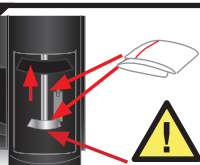
Spray all dispensing area surfaces with multi surface cleaner and wipe with a clean red border cloth. Thoroughly spray each individual product dispense nozzle and dispense area with multi surface cleaner. Carefully wipe the dispense nozzles with a red border cloth.

13**MIXER DOOR REMOVAL**

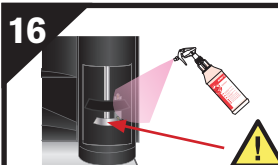
Slightly open mixer door. Squeeze at bottom of door. Tilt out and pull the door down and out. Repeat for other door.

14

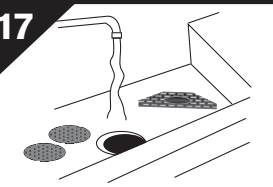
Use multi surface cleaner to thoroughly spray and red border cloth wipe down top of blender cap and blender arm.

15

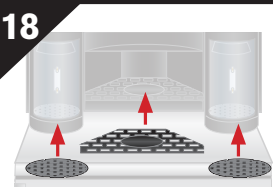
Carefully lift blender cap and thoroughly wipe down top of blade housing and bottom of blender cap.

16

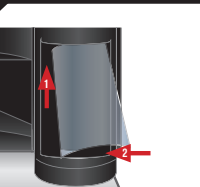
Thoroughly spray blender assembly with SolidSense Sanitizer solution. Repeat steps 13 -16 for other side.

17

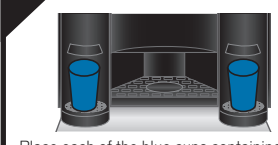
Take all grates and doors to backroom sink. Wash and sanitise using 4 step cleaning. **Do not put in dishwasher.**

18

Reinstall left and right mixer grates. Reinstall dispensing area grate.

19

Reinstall left and right mixer doors

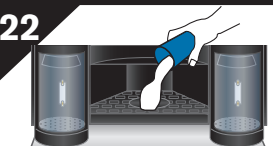
20**BLENDER WASH**

Place each of the blue cups containing SolidSense APSC solution under the blender stations. Close the blender doors. Press the **green tick**.

21

The blenders will lower into the wash solution and spin to clean. Washing will display on the screen

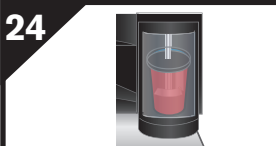
NB: DO NOT OPEN DOOR UNTIL PROMPTED TO REMOVE

22

Remove cup from each blender station and pour solution down the drain. **The blending stations will rinse automatically.**

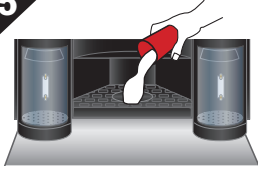
23

Place a cup with SolidSense Sanitizer solution in each blender station. Press the **green tick**. Sanitising will display on the screen.

24

The blenders will lower into the sanitiser solution and spin to clean. Sanitising will display on the screen.

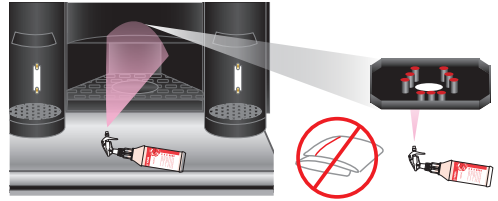
NB: DO NOT OPEN DOOR UNTIL PROMPTED TO REMOVE

25

Remove cup from each blender station and pour Sanitizer solution down the drain .

26**MIXER STATION
SANITISE:**

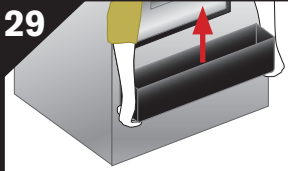
Spray blending station surfaces with Sanitizer solution. Allow to air dry. Do not wipe off sanitiser. Repeat for other side.

27

Thoroughly spray each individual dispense nozzle and the dispense area with Sanitizer solution. Allow to air dry. Do not wipe off sanitiser.

28

Daily clean completed.
Press the **green tick**.

29

Remove items from syrup rail and store in a hygienic location close to the machine. Remove syrup rail and 4-step clean, before returning to the machine.